


## NOTE: PROVIDE AT LEAST 1 DROP FOR EVERY 1 ¼"C TO TELCOM ROOM OR CABLE TRAY 3 TELCOM OUTLETS ½"C, MINIMUM TO POWER PANEL **CEILING** LINE **ENTRANCE** END **FITTING** PANDUIT TWIN-70 OR WIREMOLD 60N2 (VERTICAL CONDUIT **DROPS SHALL NOT** BE USED) INSTALL A "STANDARD FACEPLATE BRACKET" (PANDUIT #T70SDB-X OR EQUIVALENT) (HUBBELL HBL4750IV) AT TELECOM RECEPTACLES MOUNTED VERTICALLY THE TELE/DATA LOCATIONS IN THE RACEWAY. DO NOT USE "HANGING BOXES". (TYPE AS INDICATED ON PLANS) TYPICAL NEMA 5-20R RECEPTACLE SECOND QUAD WHERE INDICATED -A.F.F. AS SHOWN ON PLANS

## INSTALLATION DETAIL - FOR EXISTING WALLS TYPICAL DUAL CHANNEL PLASTIC RACEWAY

**NO SCALE** 

## BENCHTOP VERTICAL PLASTIC RACEWAY INSTALLATION

NO SCALE 26053321.dgn

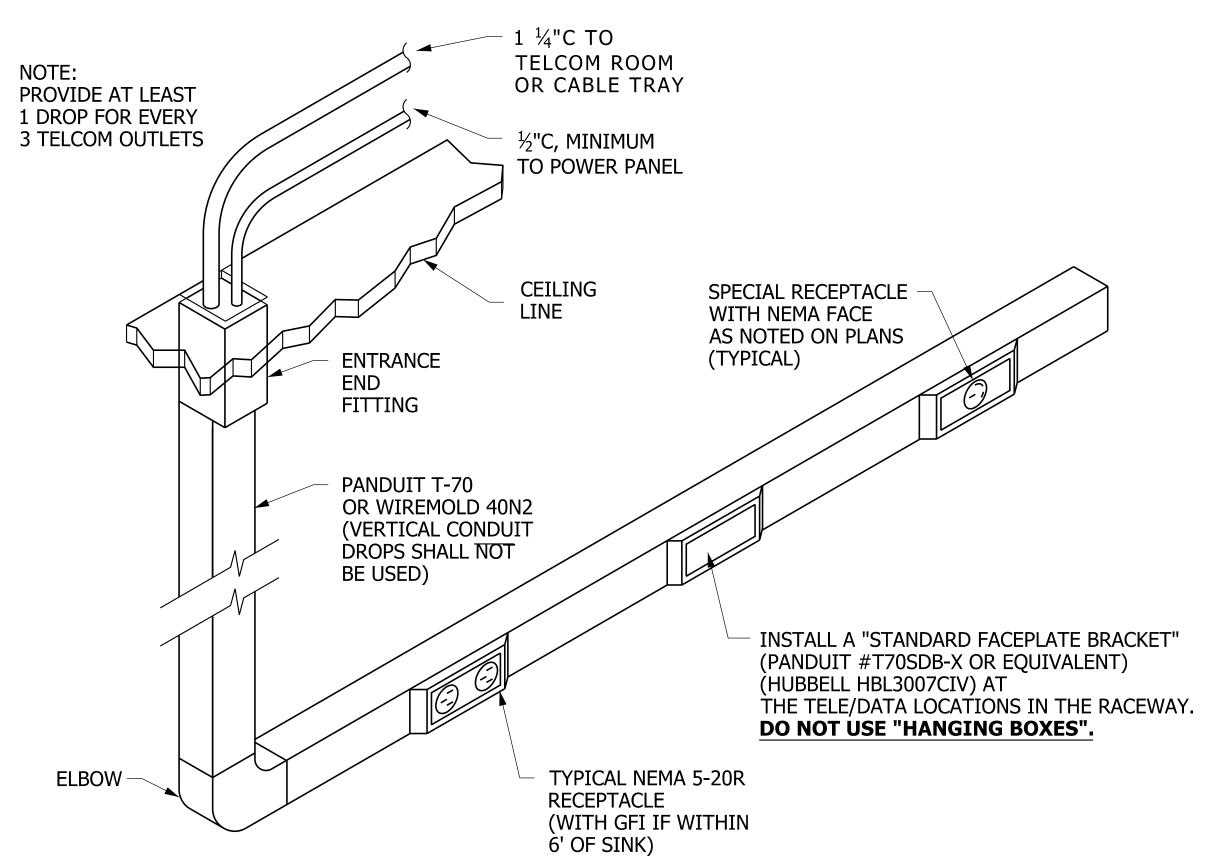

## INSTALLATION DETAIL - FOR EXISTING WALLS TYPICAL DUAL CHANNEL PLASTIC RACEWAY

26053321.dgn NO SCALE 26053321.dgn